




Be Right™

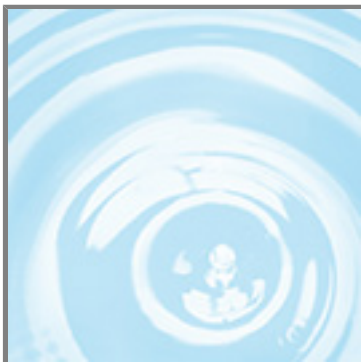

## EZ3505sc Chloride Ion-Selective Electrode (ISE) Standard Addition Analyser, 1 stream, 4x mA

Kat. číslo produktu: EZ3505.9800140T

CZK Cena bez DPH: Kontaktujte nás

Datum odeslání neuvedeno

### Accurate Chloride Measurement in Variable Water Matrices

Changing water matrices, fouling and interferences can make chloride ISE measurements unstable. The EZ3505sc combines discontinuous ISE analysis with a standard addition method to compensate for matrix effects and deliver repeatable chloride results - even when sample conditions shift. Automated operation reduces manual calibration and sensor maintenance while supporting treatment efficiency and regulatory compliance.

Monitor up to eight sample streams from one analyser to reduce footprint and infrastructure cost. Standard analog and digital communications integrate easily with existing plant networks for real-time data, diagnostics and faster decisions.

#### Benefits:

- Standard addition compensates for interferences in variable matrices
- Discontinuous ISE analysis delivers stable, repeatable chloride results
- Reduces manual calibration and sensor maintenance
- Multi-stream capability: up to 8 sample points per analyser
- Easy integration via common analog/digital protocols

#### Advanced Standard Addition Technology

Ensure reliable data accuracy with advanced discontinuous and standard addition modes. This feature automatically compensates for interferences, delivering precise results even in complex or changing water conditions. Avoid compliance risks caused by inconsistent or unreliable measurements.

#### Designed for Low-Maintenance Operation

Frequent manual calibration and sensor cleaning increase maintenance effort and downtime. The EZ3505sc employs discontinuous and automated standard addition modes to compensate for matrix effects, stabilise potentiometric response, reduce reagent consumption, and maximise analyser uptime for reliable chloride monitoring.

#### Seamless System Integration

Isolated data silos hinder effective plant management. Featuring standard analogue and digital communication protocols, this analyser integrates easily into existing plant networks. Real-time visibility ensures you can make informed decisions quickly based on current process conditions.

#### Cost-Effective Scalability

Monitoring multiple sample points traditionally requires significant capital investment. This system supports multi-stream functionality, allowing a single unit to analyse up to 8 sample streams. You gain comprehensive process insight while optimising infrastructure costs and reducing equipment footprint.

---

## Technické údaje

Analogové výstupy:	Active 0 - 20 mA (or 4 - 20 mA) max. 500 Ohm load, standard 4, optional: 8
Automatické čištění:	Yes; Frequency freely programmable: 6 hours, 12 hours, daily, weekly
Certifikace:	CE, ETL certified to UL and CSA safety standards, UKCA
Demineralised water:	Internal dilution option: Rinse water and Dilution water
Digitální výstupy:	Relays: 5 contacts, not user configurable: Malfunction, maintenance, analysis ready, sample ready, sample ready (EZ9150)
	Ethernet Connections: Optional: Claros Ethernet connection and Modbus TCP/IP Ethernet connector; LAN version; 10/100 Mbps or Profinet or Ethernet IP
	RS485 communication: Profibus DP or Modbus RTU
Doba cyklu :	No dilution
	Default: 5 minutes
	Continuous: 4 minutes
	Internal dilution
	Default: 10 minutes
	Continuous: 7 minutes
Earth connection:	Earth connection Dry and clean earth pole with low impedance (< 1 Ohm) using an earth cable of > 2.5 mm <sup>2</sup>
Hmotnost:	Max. 35 kg
Instrument air:	Dry and oil free according to ISA-S7.0.01-1996 quality standard for instrument air. Used to flush the instrument in corrosive environment. Min. 0.2 bar - Max. 0.5 bar
Interference :	Bromide [(Br)-], sulphide [(S) <sup>2-</sup> ], iodide [(I)-], cyanide [(CN)-] ions may interfere. Mercury [(Hg)+] must be absent. Ammonia [NH <sub>3</sub> ] and thiosulphate [(S <sub>2</sub> O <sub>3</sub> ) <sup>2-</sup> ] may interfere. Fats, oil, proteins, surfactants and tar.
Jaký je obsah balení:	EZ3505sc Chloride Ion-Selective Electrode (ISE) Standard Addition Analyser, Instruction Manual, 1 x Double Bit Door Key, 1 x Mounting Brackets, 1 x ISE Electrode and Chloride Electrode, combined, and 2 x empty 5L Reagent Containers with Fittings (for Buffer and Standard Cl Solution)
Kalibrace:	Automatic; 2-point; offset or slope; Frequency freely programmable: 6 hours, 12 hours, daily, weekly. Note: manufacturer recommends that a calibration is done when the reagents are replaced
Materiál:	Hinged part: Thermoform ABS, Door: PMMA
	Wall section: Galvanised steel, powder coated
Metoda měření:	Ion-Selective Electrode (standard addition)
Mez detekce:	No dilution
	2 - 100 mg/L Cl <sup>-</sup> : 2 mg/L
	5 - 250 mg/L Cl <sup>-</sup> : 5 mg/L
	10 - 500 mg/L Cl <sup>-</sup> : 10 mg/L

	20 - 1000 mg/L Cl <sup>-</sup> : 20 mg/L
	Internal dilution
	100 - 5000 mg/L Cl <sup>-</sup> : 100 mg/L
	200 - 10000 mg/L Cl <sup>-</sup> : 200 mg/L
Napájení:	100 - 240 VAC, 50/60 Hz
	Max. power consumption: 120 VA
Odtok:	Atmospheric pressure, vented, min. Ø 32 mm
Okolní teplota:	10 - 30 °C ± 4 °C deviation at 5 - 95% relative humidity (non-condensing)
Parametr:	Chloride
Počet proudů vzorku:	Standard: 1
	Optional accessory for 2, 4, or 8 sample streams
Požadavky na vzorek:	Maximum particle size 100 µm, < 0.1 g/L; Turbidity < 50 NTU
Přesnost:	Better than 2% full scale range for standard test solutions
Průtoková rychlost:	100 - 300 mL/min
Reagent Requirements:	Keep between 10 - 30 °C
Rozměry (V x Š x H):	688 mm x 460 mm x 340 mm
Rozsah měření:	No dilution
	2 - 100 mg/L Cl <sup>-</sup>
	5 - 250 mg/L Cl <sup>-</sup>
	10 - 500 mg/L Cl <sup>-</sup>
	20 - 1000 mg/L Cl <sup>-</sup>
	Internal dilution
	100 - 5000 mg/L Cl <sup>-</sup>
	200 - 10000 mg/L Cl <sup>-</sup>
Teplota vzorku:	10 - 30 °C
Tlak vzorku:	By external overflow vessel (open to atmospheric pressure)
Třída ochrany:	IP44
Validation:	Automatic; Frequency freely programmable: 6 hours, 12 hours, daily, weekly
Záruka:	24 měsíců

---

## Jaký je obsah balení

EZ3505sc Chloride Ion-Selective Electrode (ISE) Standard Addition Analyser, Instruction Manual, 1 x Double Bit Door Key, 1 x Mounting Brackets, 1 x ISE Electrode and Chloride Electrode, combined, and 2 x empty 5L Reagent Containers with Fittings (for Buffer and Standard Cl Solution)